


Lasertree K20 on a Shapeoko 3


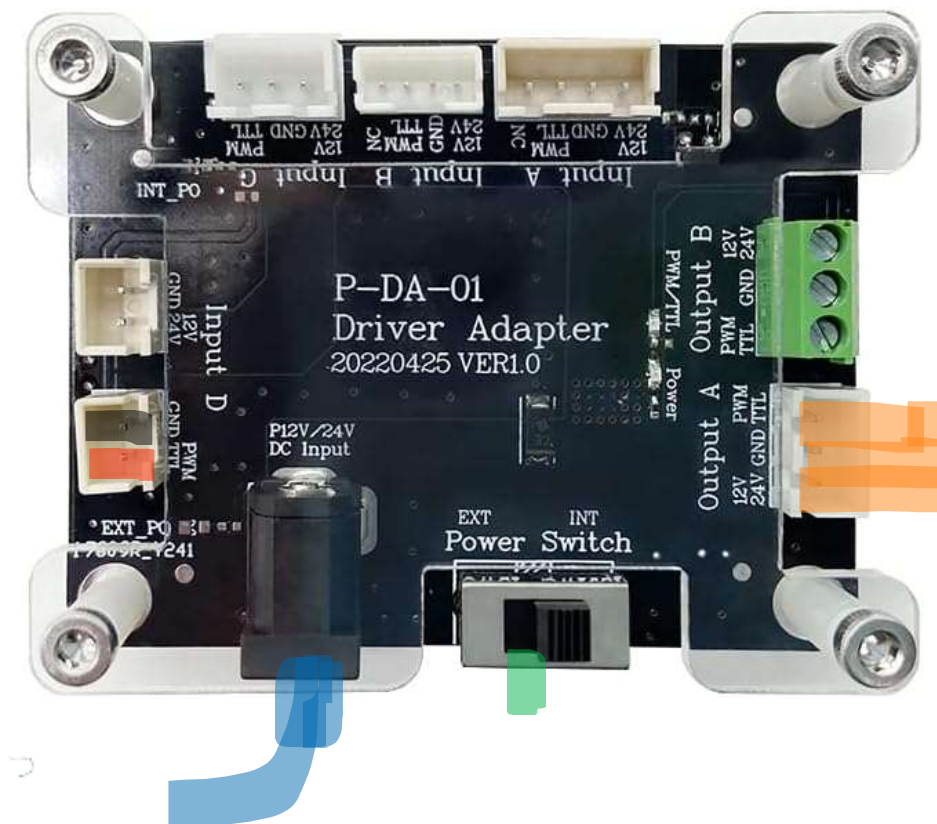


Blue line is the aux power source for the laser

Green is the position to move the switch to (ext power)

Input D: red is from Shapeoko board PWM signal and black next to it is ground from the Shapeoko board

Output A: orange is cable to connect to the Laser Module

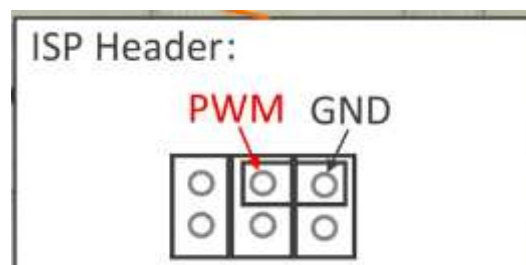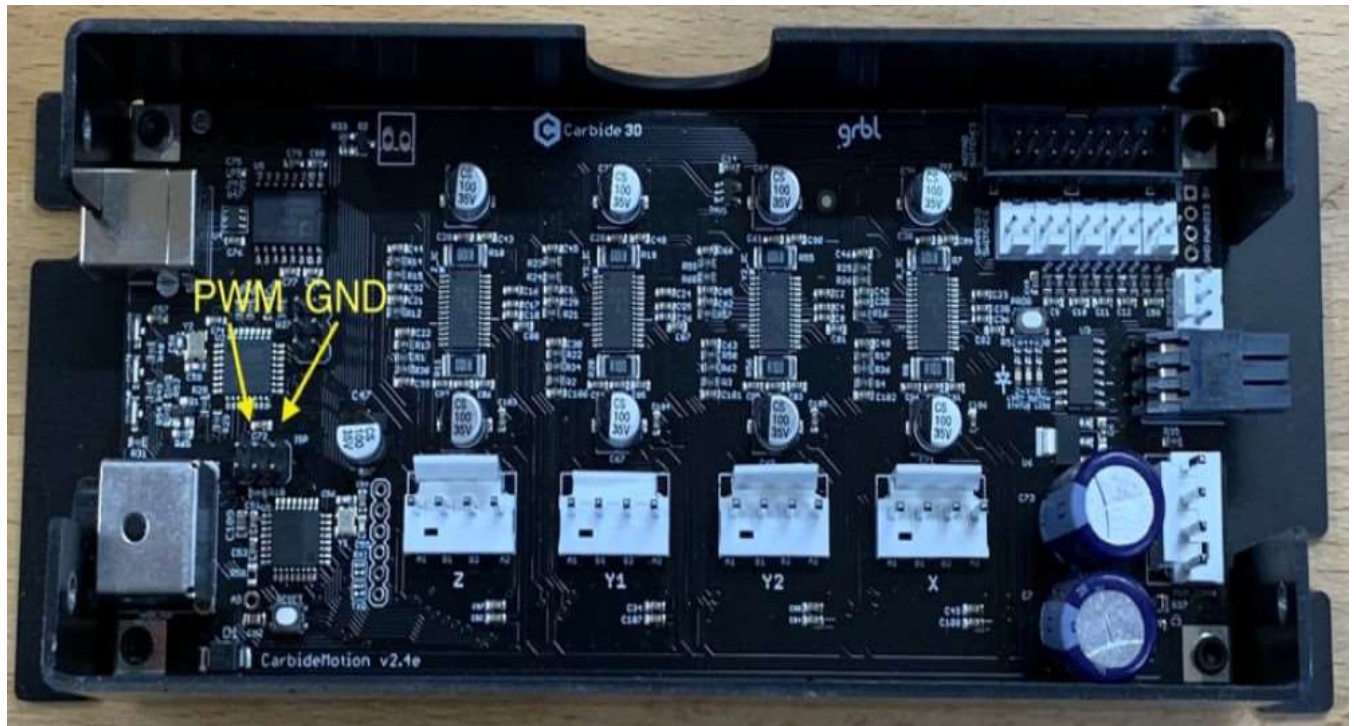

Connect a red wire from the PWM pin on the Shapeoko board to the PWM pin on input D on the adapter board and a black wire from the

GND pin on the Shapeoko board to the GND on input D adapter board

