

Initialialize and Home your Machine

Click below to initialize your machine.

If you'd like to test your homing switches prior to homing, you can check the active switch state below.

Homing Switch State

- ☒ Home X
- ☐ Home Y
- ☐ Home Z

Initialize Machine

< Back

Next >