


To avoid contact
move drag chain in Y
direction towards
rear. Leaving min.
11/32" overhang of
drag chain.

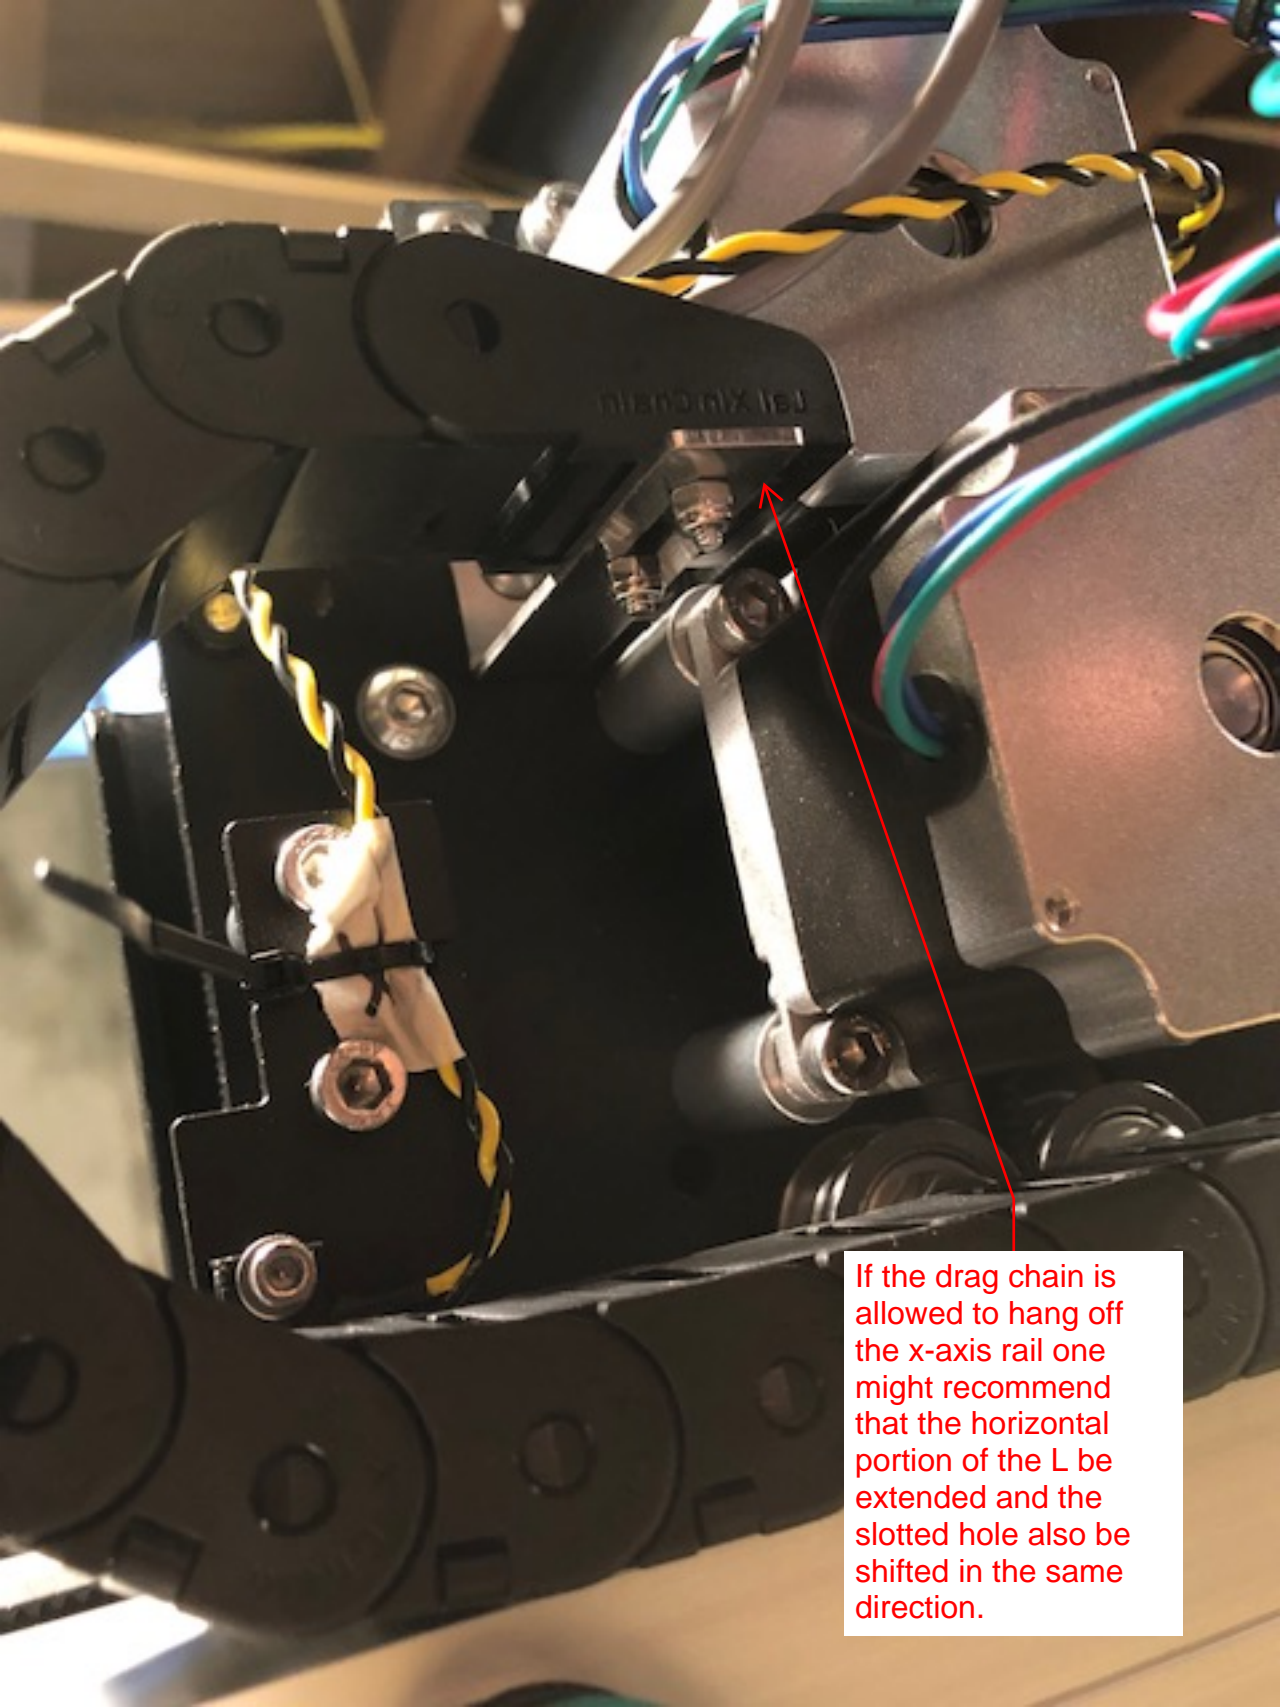

If the drag chain is allowed to hang off the x-axis rail one might recommend that the horizontal portion of the L be extended and the slotted hole also be shifted in the same direction.

